




**Sphero BOLT Printable
Code Mat Instructions**

Sphero BOLT Printable Code Mat Instructions


CUT LINE



OVERLAP EDGE




ADHESIVE/ OVERLAP AREA



This 60 page document will be used to assemble your Code Mat. Print out each page on 8.5x11" paper and tape or paste them together using the instructions.


1. Print all 60 pages of the PDF. In the print dialogue box, select "Scale: 100%". This will ensure the Code Mat is printed at the correct size.

The Code Mat can also be printed in Grayscale / Black and White.

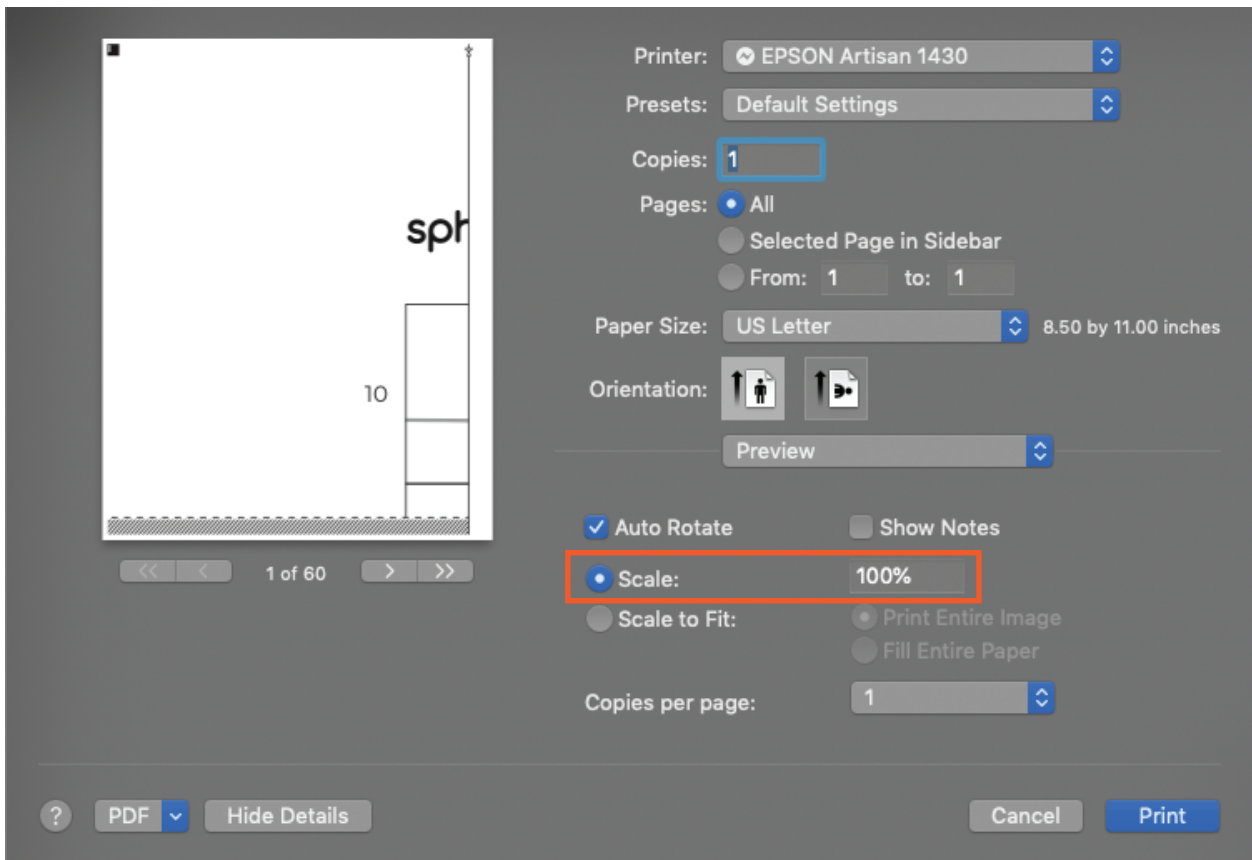

Sphero BOLT Printable Code Mat Instructions


CUT LINE




OVERLAP EDGE



ADHESIVE/ OVERLAP AREA




2. Cut along the solid scissor lines on the top and right sides of each page.
3. Line up the cut edges on the top and right side of the page with the dashed lines on the sheets above and to the right. Pages will overlap on top of each other.
 - Line up the cut edge on the right side with the vertical dashed line on the page to the right.
 - Line up the cut edge on the top with the horizontal dashed line on the page above it.

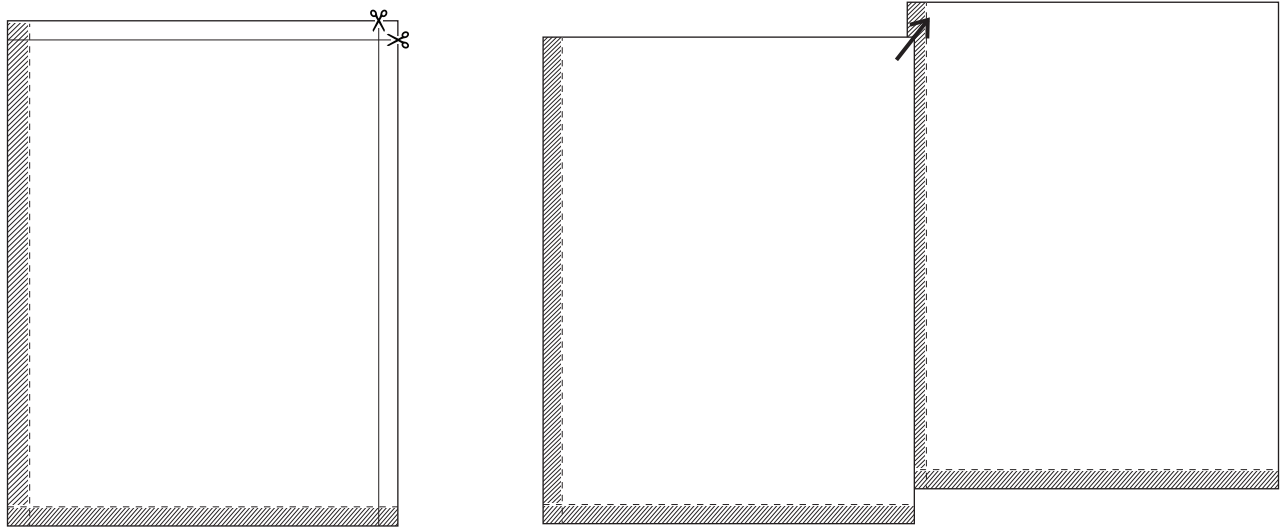

4. Tape pages together on the bottom of the Code Mat or glue on the adhesive area so the robot has a smooth surface to roll on.
5. Repeat steps for each page until the Code Mat is assembled.

Sphero BOLT Printable Code Mat Instructions

Assemble pages in chronological order from left to right.

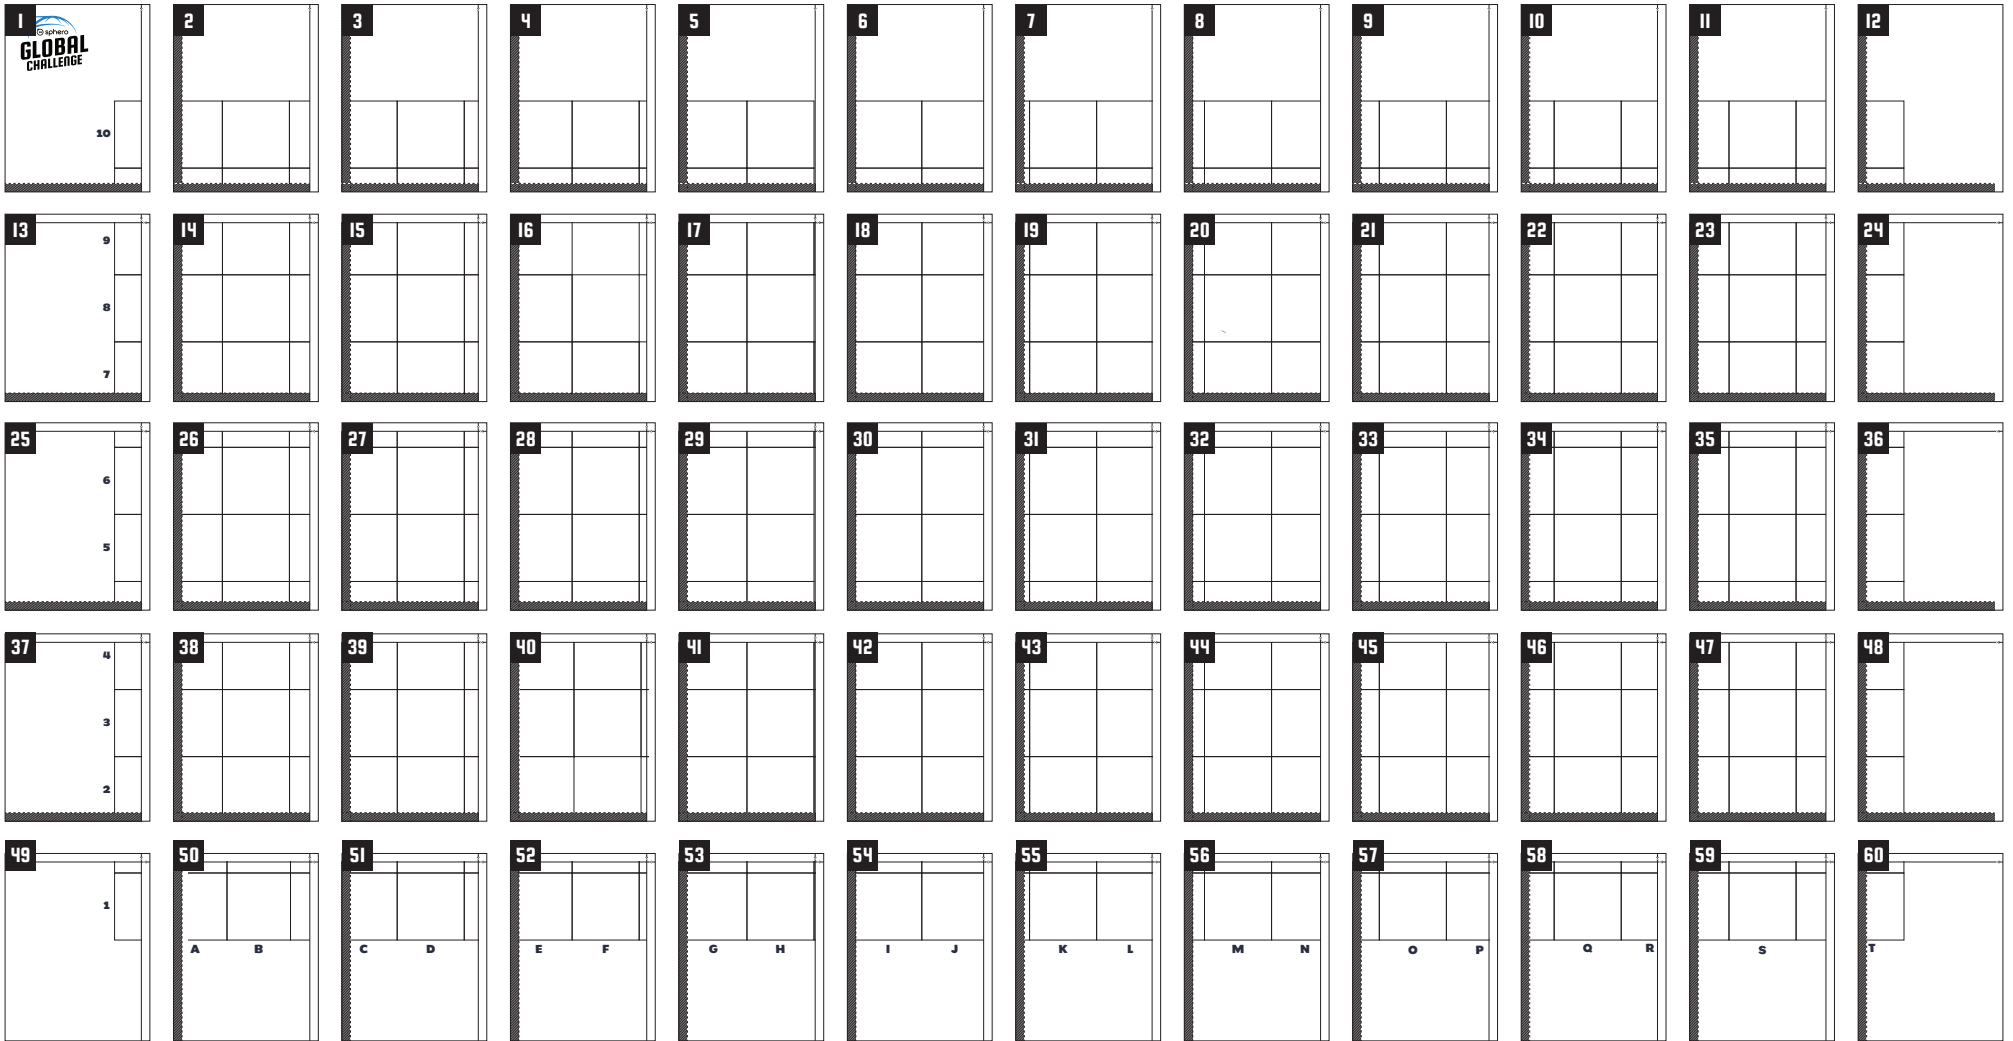

Sphero BOLT Printable Code Mat Instructions

Your Code Mat will look like a blank grid with coordinates A-T and 1-10.

10																				
9																				
8																				
7																				
6																				
5																				
4																				
3																				
2																				
1																				
	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T